

### MASTERPIECES MADE IN GERMANY

### **Analog Transmitter**

# SIGNAL 4.0











#### Operation

 The position of a magnetic float / piston is detected by means of Hall sensors and converted into an analog signal.

### **Application**

- Use in combination with float-type sensors for various flow media (see table on page 2)
- Industry 4.0

#### **Features**

Analog output (4-20 mA and 0-10 V)

### Installation information

- Refer also to the applicable data sheets and operating instructions for the flow monitor!
- Download: www.meister-flow.com

## OPERATING DATA

Accuracy (1)	± 10 % of full scale
Operating temperature	-20 °C - 70 °C
Storage temperature	-20 °C - 80 °C
Repeatability	tbd.

<sup>(1)</sup> Higher calibration accuracy when calibrated individually. Available on request.

### POSSIBLE COMBINATIONS


Туре		
Sensor	Transmitter	Combination
DUM	+ SIGNAL 4.0	= DUM/SIGNAL 4.0
DWM	+ SIGNAL 4.0	= DWM/SIGNAL 4.0
RVM/U-1	+ SIGNAL 4.0	= RVM/U-1/SIGNAL 4.0
RVM/U-2	+ SIGNAL 4.0	= RVM/U-2/SIGNAL 4.0
RVM/U-4	+ SIGNAL 4.0	= RVM/U-4/SIGNAL 4.0
WY	+ SIGNAL 4.0	= WY/SIGNAL 4.0
DKM-1	+ SIGNAL 4.0	= DKM-1/SIGNAL 4.0
DKM-2	+ SIGNAL 4.0	= DKM-2/SIGNAL 4.0
DKME	+ SIGNAL 4.0	= DKME/SIGNAL 4.0
DWM-L	+ SIGNAL 4.0	= DWM-L/SIGNAL 4.0
RVM/U-L1	+ SIGNAL 4.0	= RVM/U-L1/SIGNAL 4.0
RVM/U-L2	+ SIGNAL 4.0	= RVM/U-L2/SIGNAL 4.0
RVM/U-L4	+ SIGNAL 4.0	= RVM/U-L4/SIGNAL 4.0


# MATERIALS

Nor	ı-wei	tted	parts
IOUI	ı-we	ιιeu	Darts

Housina:	Aluminium, blue anodized

### ■ TECHNICAL DRAWING

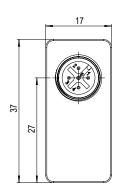


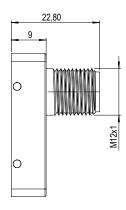

### ■ CONNECTION DIAGRAM



### CURRENT-FLOW CHARACTERISTIC

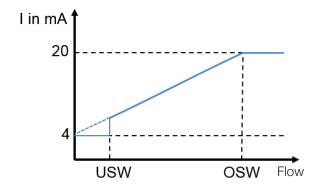

### ■ ELECTRICAL DATA

### **Analog output**

4...20 mA and 0...10 V

#### **Power supply**

24 VDC (19...30 VDC)

### Power consumption

< 1 W

#### **Current output**

Max. load 600  $\Omega$ 

### Voltage output

Max. current 10 mA

#### Connection

For round plug M12x1, 5 pin

### **Ingress Protection**

IP 67

#### Notes

Please note that the flowmeter and the SIGNAL 4.0 analog transmitter have been optimally adjusted to each other and may not be exchanged!

Please also refer to the data sheets and operating instructions of the respective flowmeter!

